

Настройка Grandstream GXP1405,1450

1. Подключить Grandstream к сети электропитания и к интернету.
2. Узнать IP адрес можно через панель телефона, нажав на клавишу MENU → Status → Network Status → IP
3. В верхней строке отобразится IP-адрес телефона. Вводим этот адрес в адресной строке вашего браузера (например 192.168.0.100). Откроется Web-интерфейс телефона.
4. Пароль по умолчанию «admin».
5. Открываем вкладку Accounts → General Settings и заполняем следующие поля:

The screenshot shows the 'General Settings' page for 'Account 1'. The sidebar on the left contains the following menu items: Accounts, Account 1, General Settings, Network Settings, SIP Settings, Audio Settings, Call Settings, Account 2. The main content area is titled 'General Settings' and contains the following fields:

Account Active	<input type="radio"/> No <input checked="" type="radio"/> Yes
Account Name	Sip login
SIP Server	voip.uiscom.ru:9060
Secondary SIP Server	
Outbound Proxy	
SIP User ID	Sip login
Authenticate ID	Sip login
Authenticate Password	Sip password
Name	Sip login
Voice Mail UserID	

At the bottom of the form, there are three buttons: Save, Save and Apply, and Reset.

6. Нажимаем «Save».
7. В разделе Basic Settings меняем значение в поле Local Sip Port с 5060 на 5062. Для каждой трубки порты должны быть индивидуальными.

Accounts

Account 1

- General Settings
- Network Settings
- SIP Settings
- Basic Settings**
- Advanced Features
- Session Timer
- Security Settings
- Audio Settings
- Call Settings

Account 2 +

Basic Settings

TEL URI Disabled User=phone Enabled

SIP Registration No Yes

Unregister on Reboot No Yes

Register Expiration

Reregister before Expiration

Local SIP Port

SIP Registration Failure Retry Wait Time

SIP T1 Timeout

SIP T2 Timeout

SIP Transport UDP TCP TLS/TCP

SIP URI Scheme When Using TLS sip sips

Use Actual Ephemeral Port in Contact with TCP/TLS No Yes

Remove OBP from Route No Yes

Support SIP Instance ID No Yes

SUBSCRIBE for MWI No Yes

SUBSCRIBE for Registration No Yes

Enable 100rel No Yes

Caller ID Display Auto Disabled From Header

Use Privacy Header Default No Yes

Use P-Preferred-Identity Header Default No Yes

8. Нажимаем «Save».

9. В пункте Audio Settings оставляем только кодеки PCMA, PCMU, G.729A/B, в поле DTMF Payload Type ставим показатель 101 и включаем Symmetric RTP.

Accounts

- Account 1
 - General Settings
 - Network Settings
 - SIP Settings
 - Audio Settings**
 - Call Settings
- Account 2

Audio Settings

Send DTMF In-audio via RTP (RFC2833) via SIP INFO

DTMF Payload Type

Preferred Vocoder - choice 1

Preferred Vocoder - choice 2

Preferred Vocoder - choice 3

Preferred Vocoder - choice 4

Preferred Vocoder - choice 5

Preferred Vocoder - choice 6

Preferred Vocoder - choice 7

Use First Matching Vocoder in 200OK SDP No Yes

S RTP Mode

Symmetric RTP No Yes

Silence Suppression No Yes

Voice Frames per TX

G723 Rate 6.3kbps encoding rate 5.3kbps encoding rate

G.726-32 Packing Mode ITU IETF

ILBC Frame Size 20ms 30ms

ILBC Payload Type

Jitter Buffer Type

Jitter Buffer Length

10. Нажимаем «Save».

11. Открываем вкладку Settings → Call Features и включаем следующие поля: Disable Call Waiting и Disable Call Waiting Tone

The screenshot shows the Grandstream web interface. At the top, there is a navigation bar with the Grandstream logo and menu items: Status, Accounts, Settings, Network, Maintenance, and Phonebook. The version number 'Version 1.0.5.26' is displayed in the top right corner. On the left side, there is a 'Settings' sidebar with a list of categories: General Settings, Call Features, Ring Tone, Audio Control, LCD Display, Date and Time, Web Service, XML Applications, and Programmable Keys. The main content area is titled 'Call Features' and contains several settings with radio button options:

- Off-hook Auto Dial:
- Off-hook Timeout:
- Disable Call Waiting**: No Yes
- Disable Call Waiting Tone: No Yes
- Disable Direct IP Call: No Yes
- Use Quick IP Call Mode: No Yes
- Disable Conference: No Yes
- Disable in-call DTMF Display: No Yes
- Enable MPK Sending DTMF: No Yes
- Disable DND Button: No Yes
- Enable Idle Mute: No Yes

12. Нажимаем «Save and Apply».

13. Настройка завершена.